


# WIRING THE *RCS-PRO-6* ESC with battery power & Dallee sound.


**N.B. It is OK to swap outputs #1, #2, #3 & #4 to suit TX sticks.**

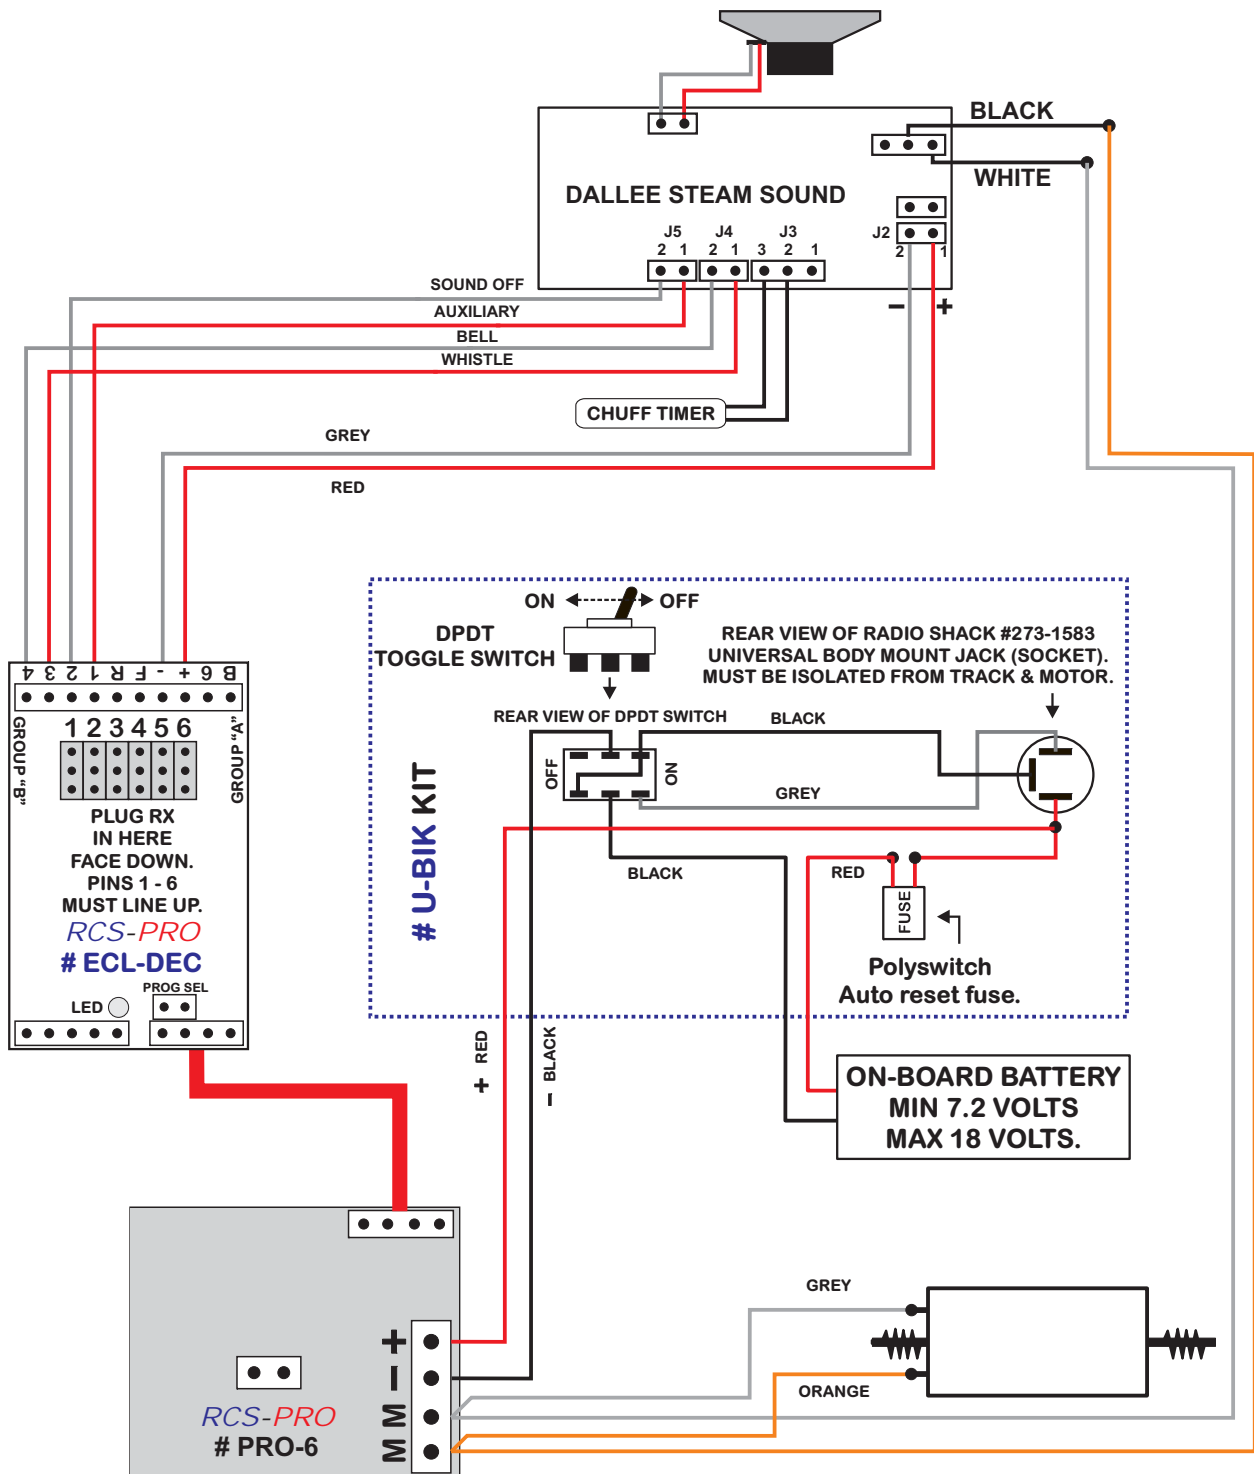

## CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.  
THEY MUST USE THE *PRO-Av1* PROGRAM.  
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.  
THEY MUST USE THE *PRO-Bv1* PROGRAM.


# WIRING THE *RCS-PRO-6* ESC with battery power only. Dallee sound. How to wire lights.

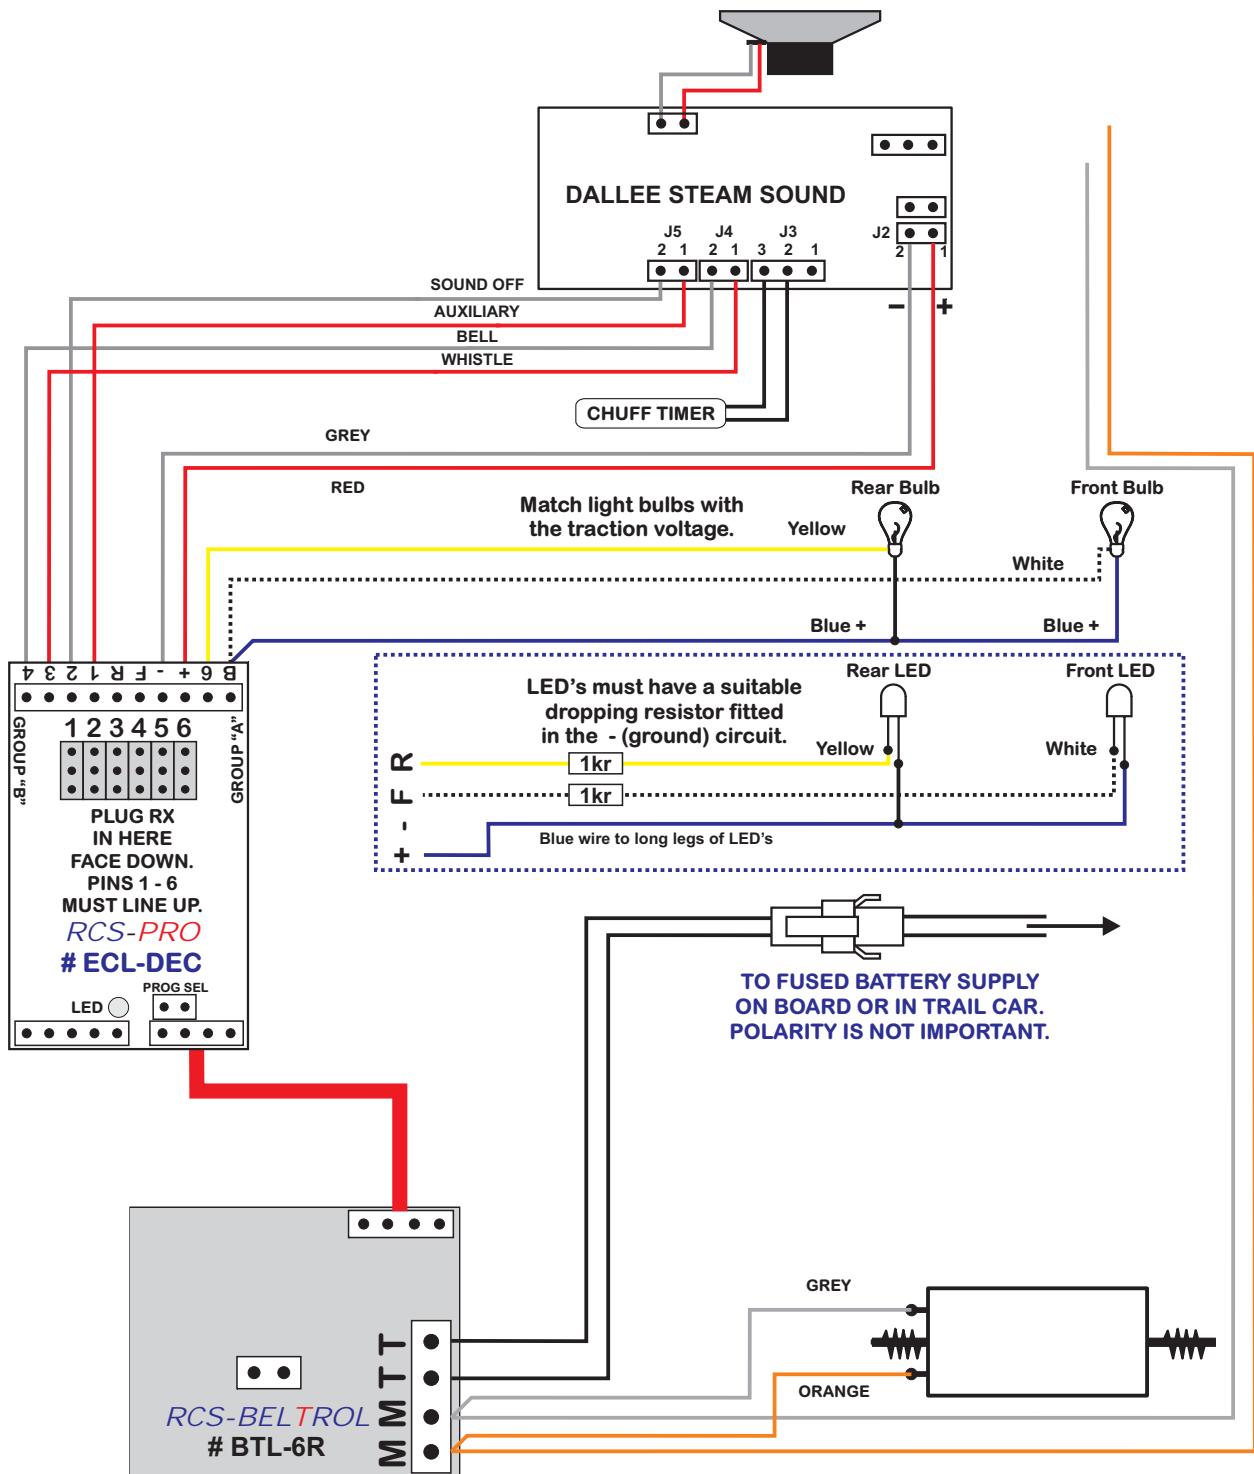

## CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.  
THEY MUST USE THE **PRO-Av1** PROGRAM.  
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.  
THEY MUST USE THE **PRO-Bv1** PROGRAM.


# WIRING THE *RCS-PRO-6* ESC using track power **AND** battery back up. Dallee sound

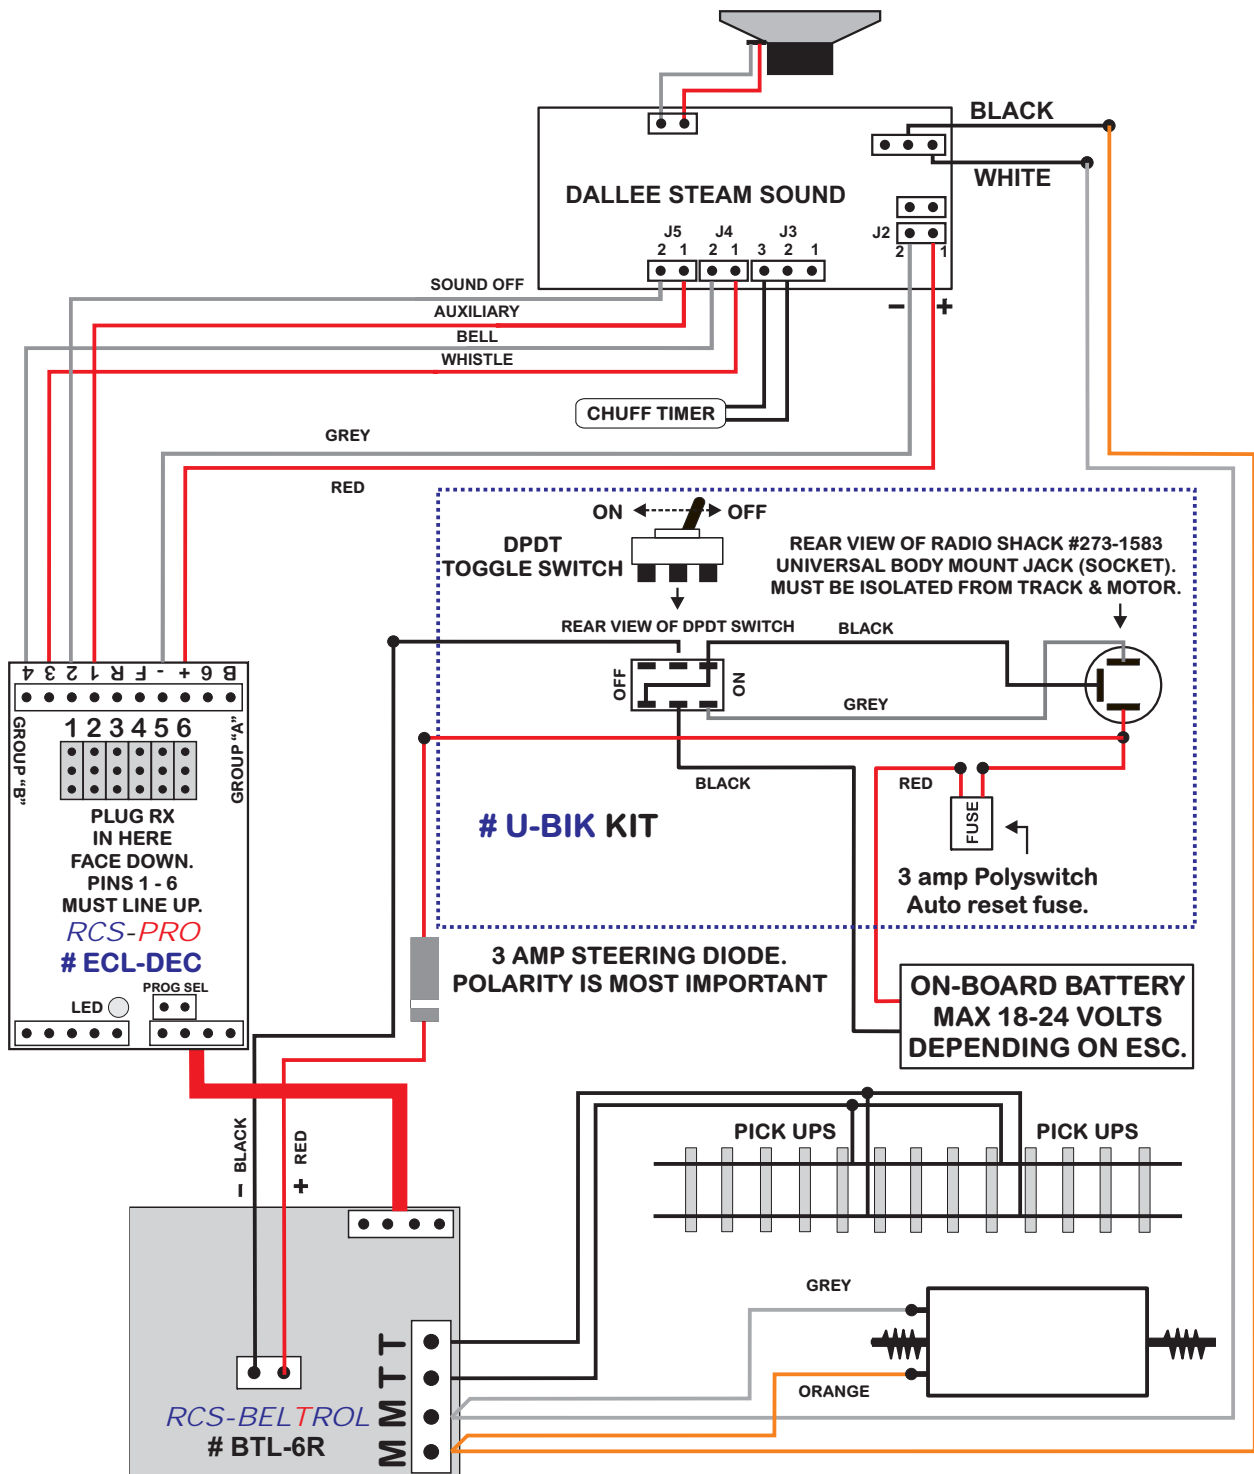

## CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.  
THEY MUST USE THE **PRO-Av1** PROGRAM.  
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.  
THEY MUST USE THE **PRO-Bv1** PROGRAM.


# WIRING THE *RCS-PRO-6* ESC using track power **OR** batteries. Dallee sound

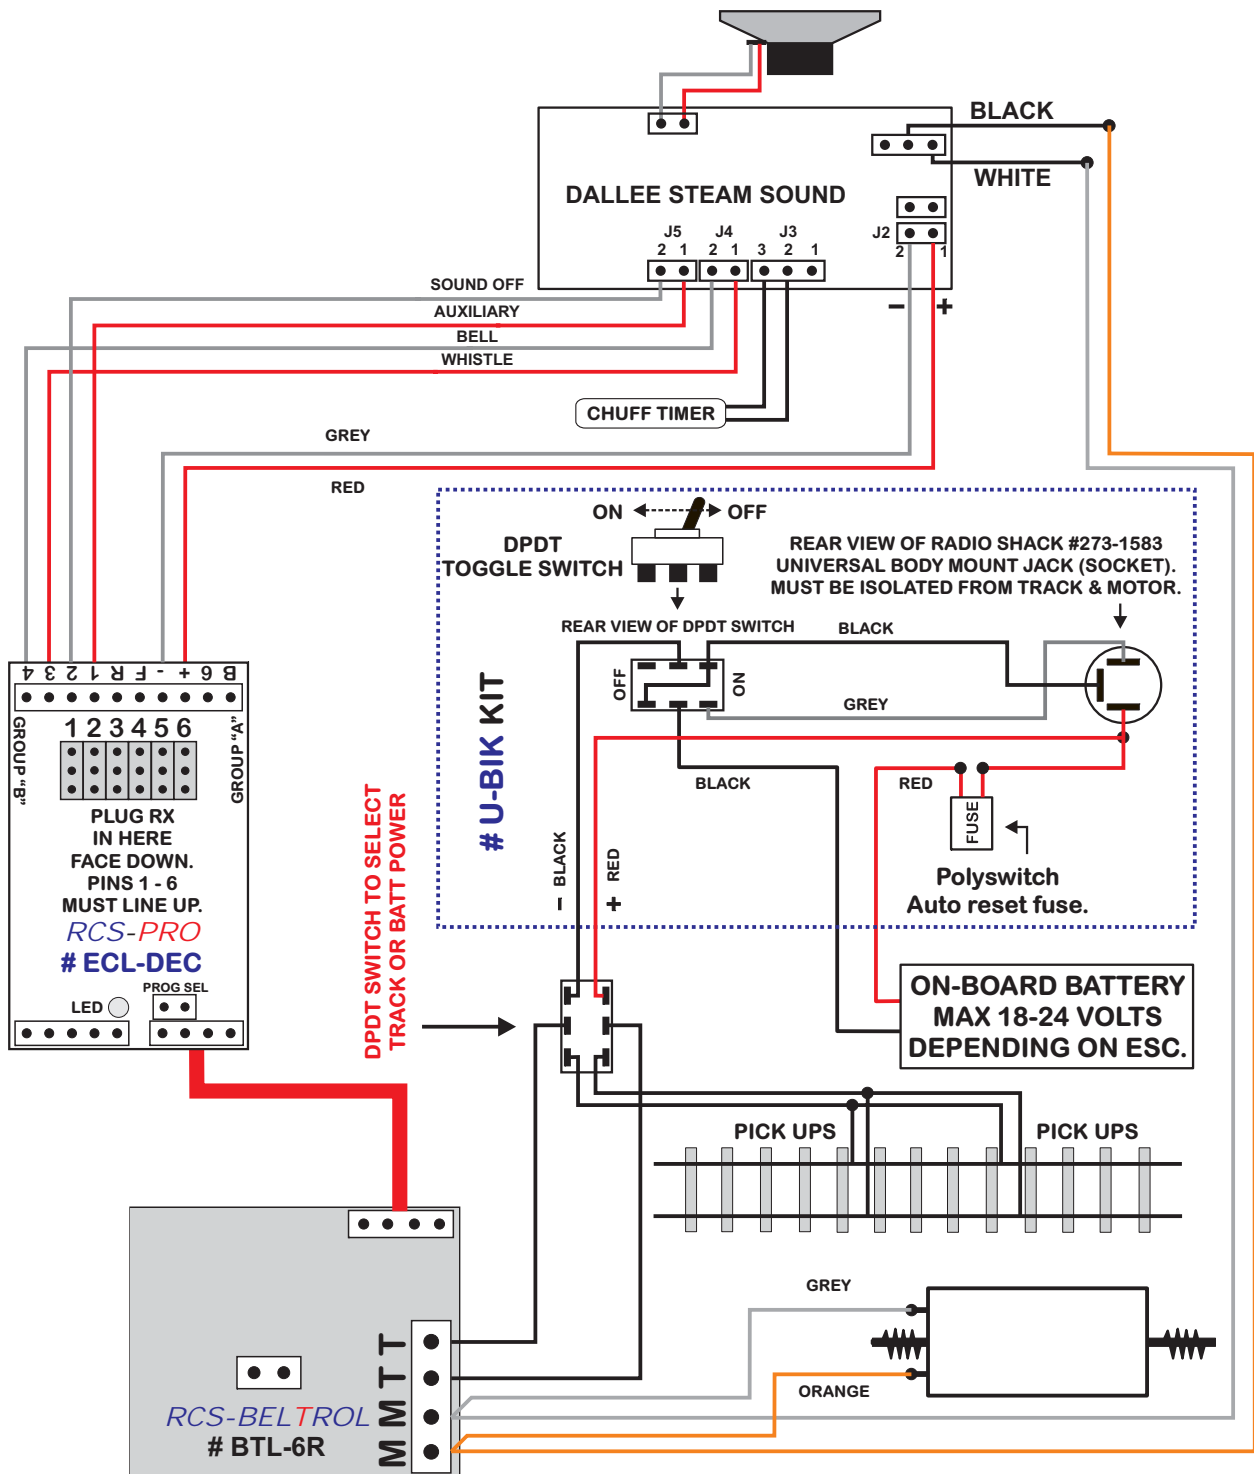

## CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.  
THEY MUST USE THE PRO-Av1 PROGRAM.  
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.  
THEY MUST USE THE PRO-Bv1 PROGRAM.

# WIRING THE *RCS-PRO-6* ESC using batteries on board with a #BIK-U3 kit. Dallee sound

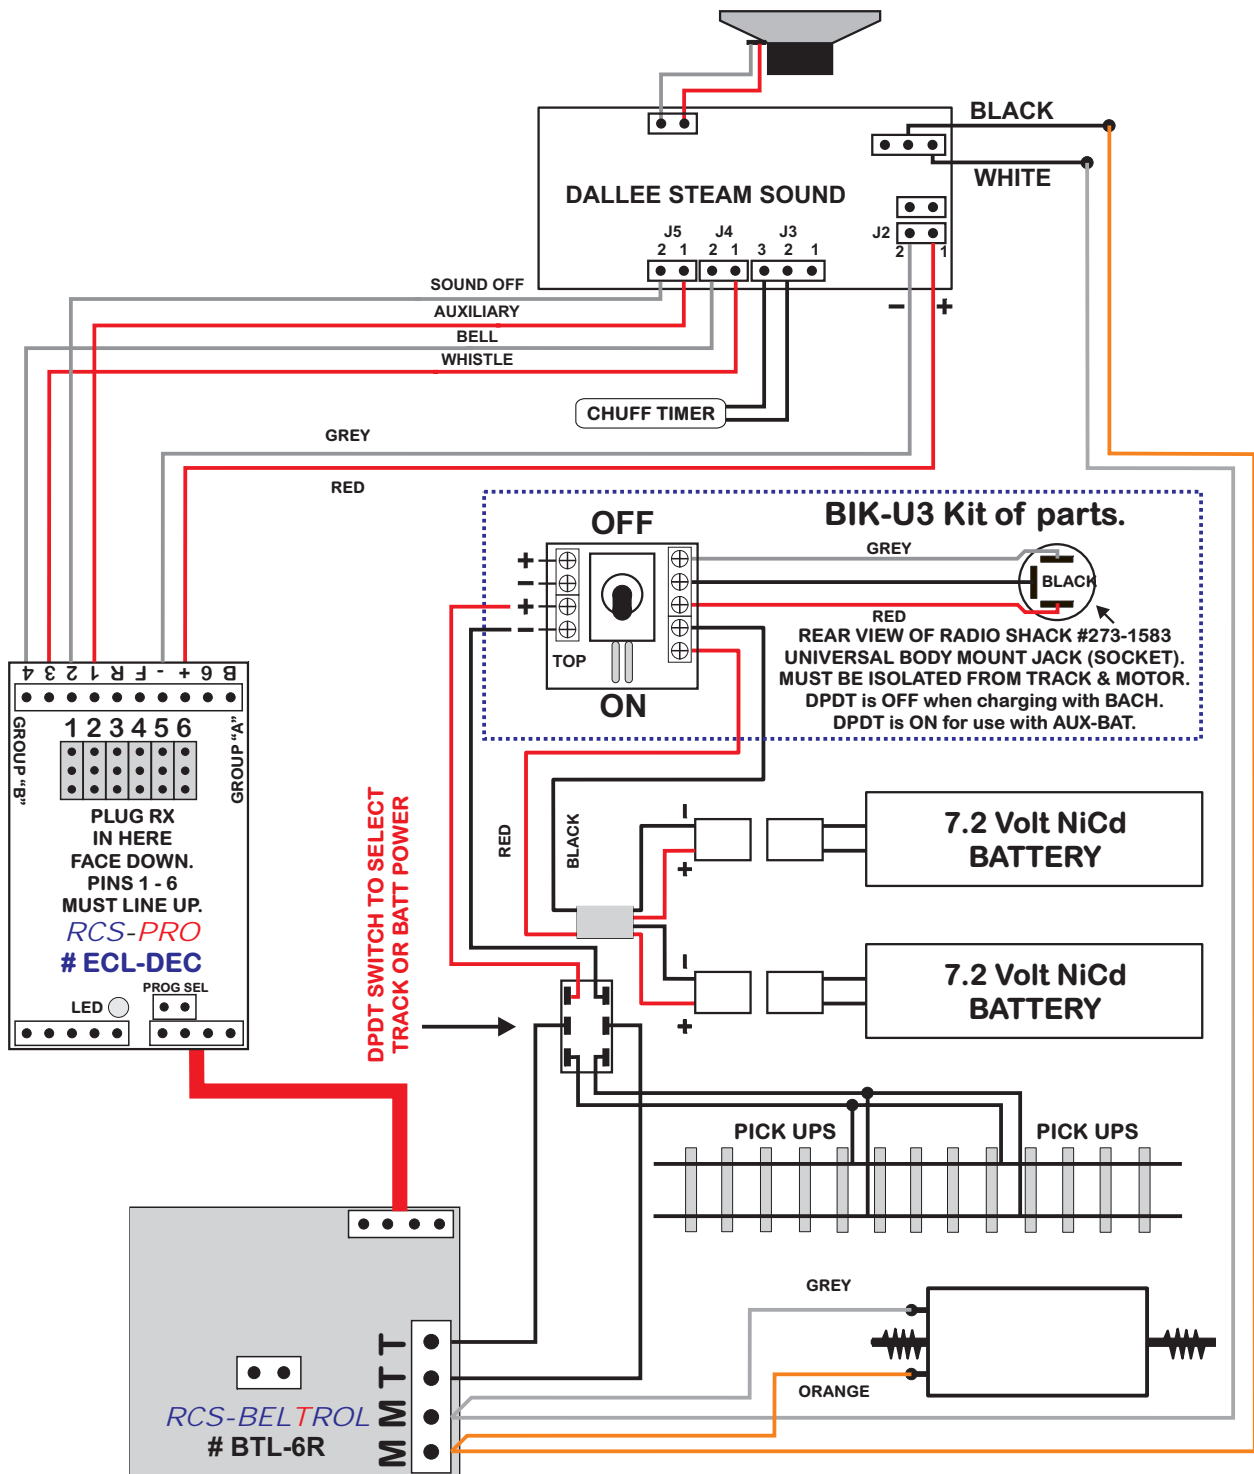

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.  
THEY MUST USE THE **PRO-Av1** PROGRAM.  
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.  
THEY MUST USE THE **PRO-Bv1** PROGRAM.