


WIRING THE *RCS-PRO-6* ESC

with battery power & Phoenix P5 + P5T sound.

N.B. It is OK to swap outputs #1, #2, #3 & #4 to suit TX sticks.

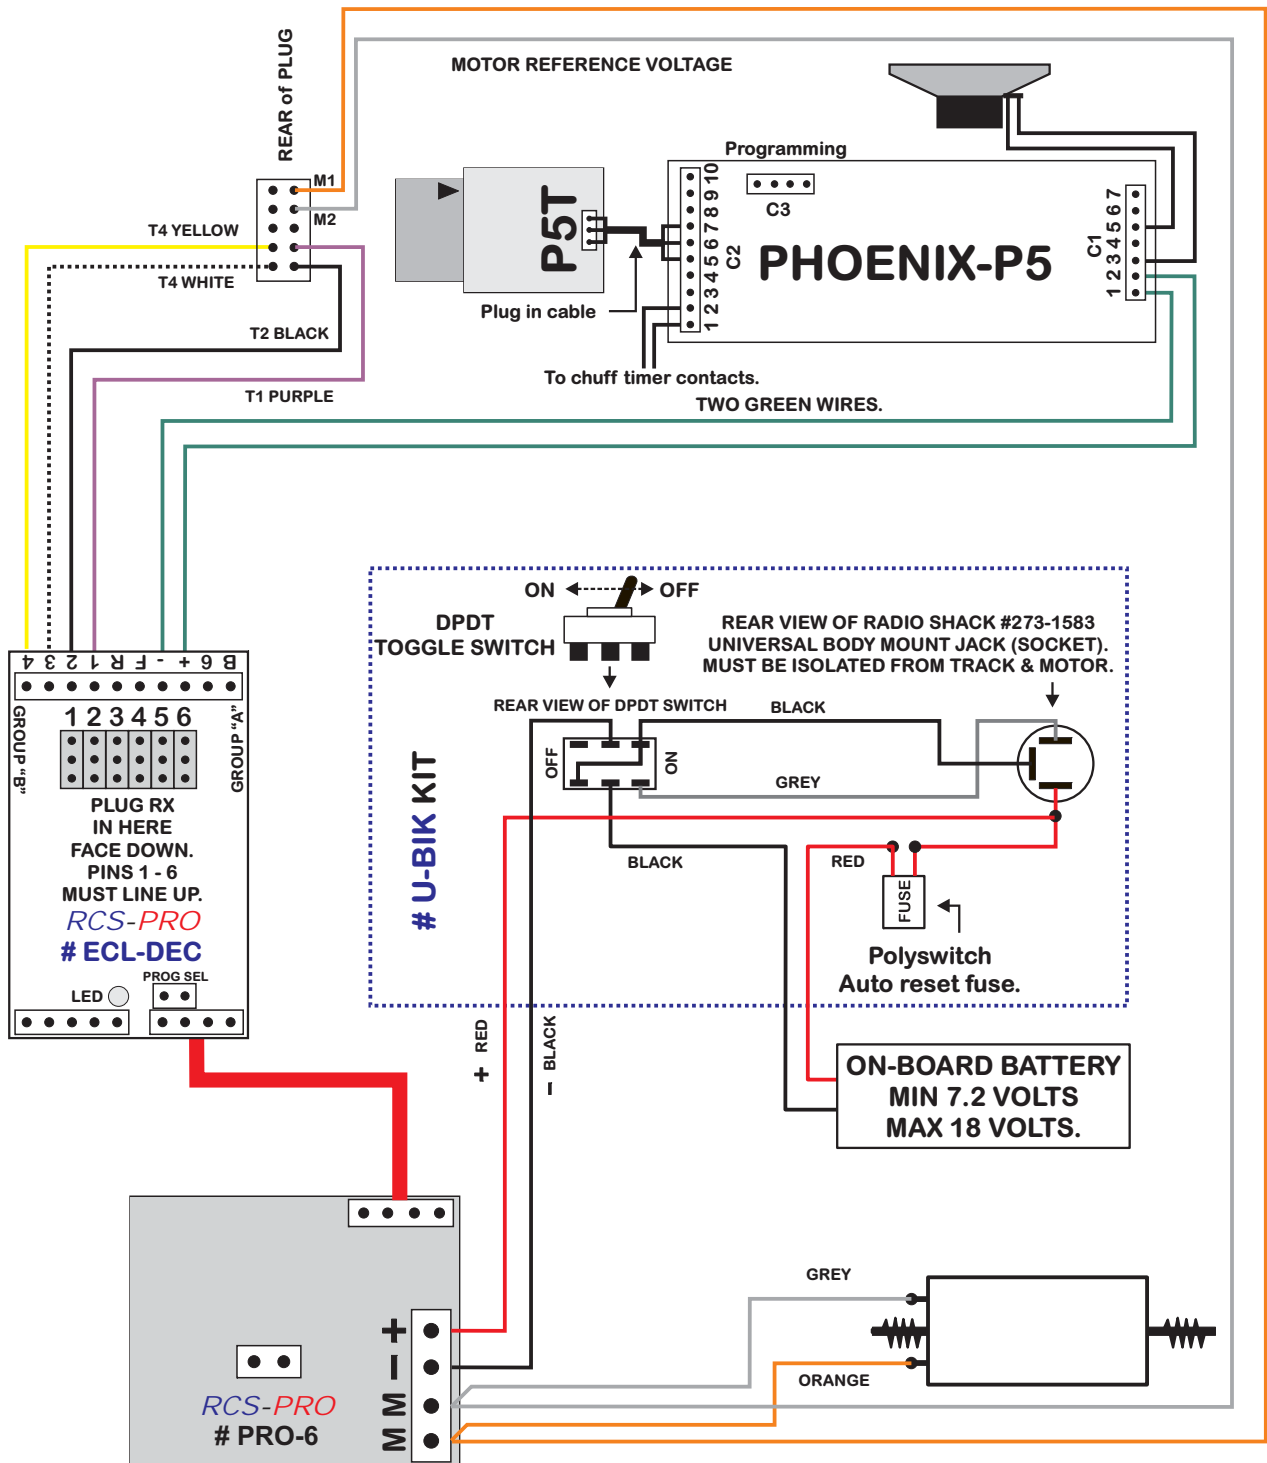


CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.
 THEY MUST USE THE **PRO-Av1** PROGRAM.

HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.
 THEY MUST USE THE **PRO-Bv1** PROGRAM.


WIRING THE *RCS-PRO-6* ESC with battery power only. Phoenix P5 + P5T sound. How to wire lights.

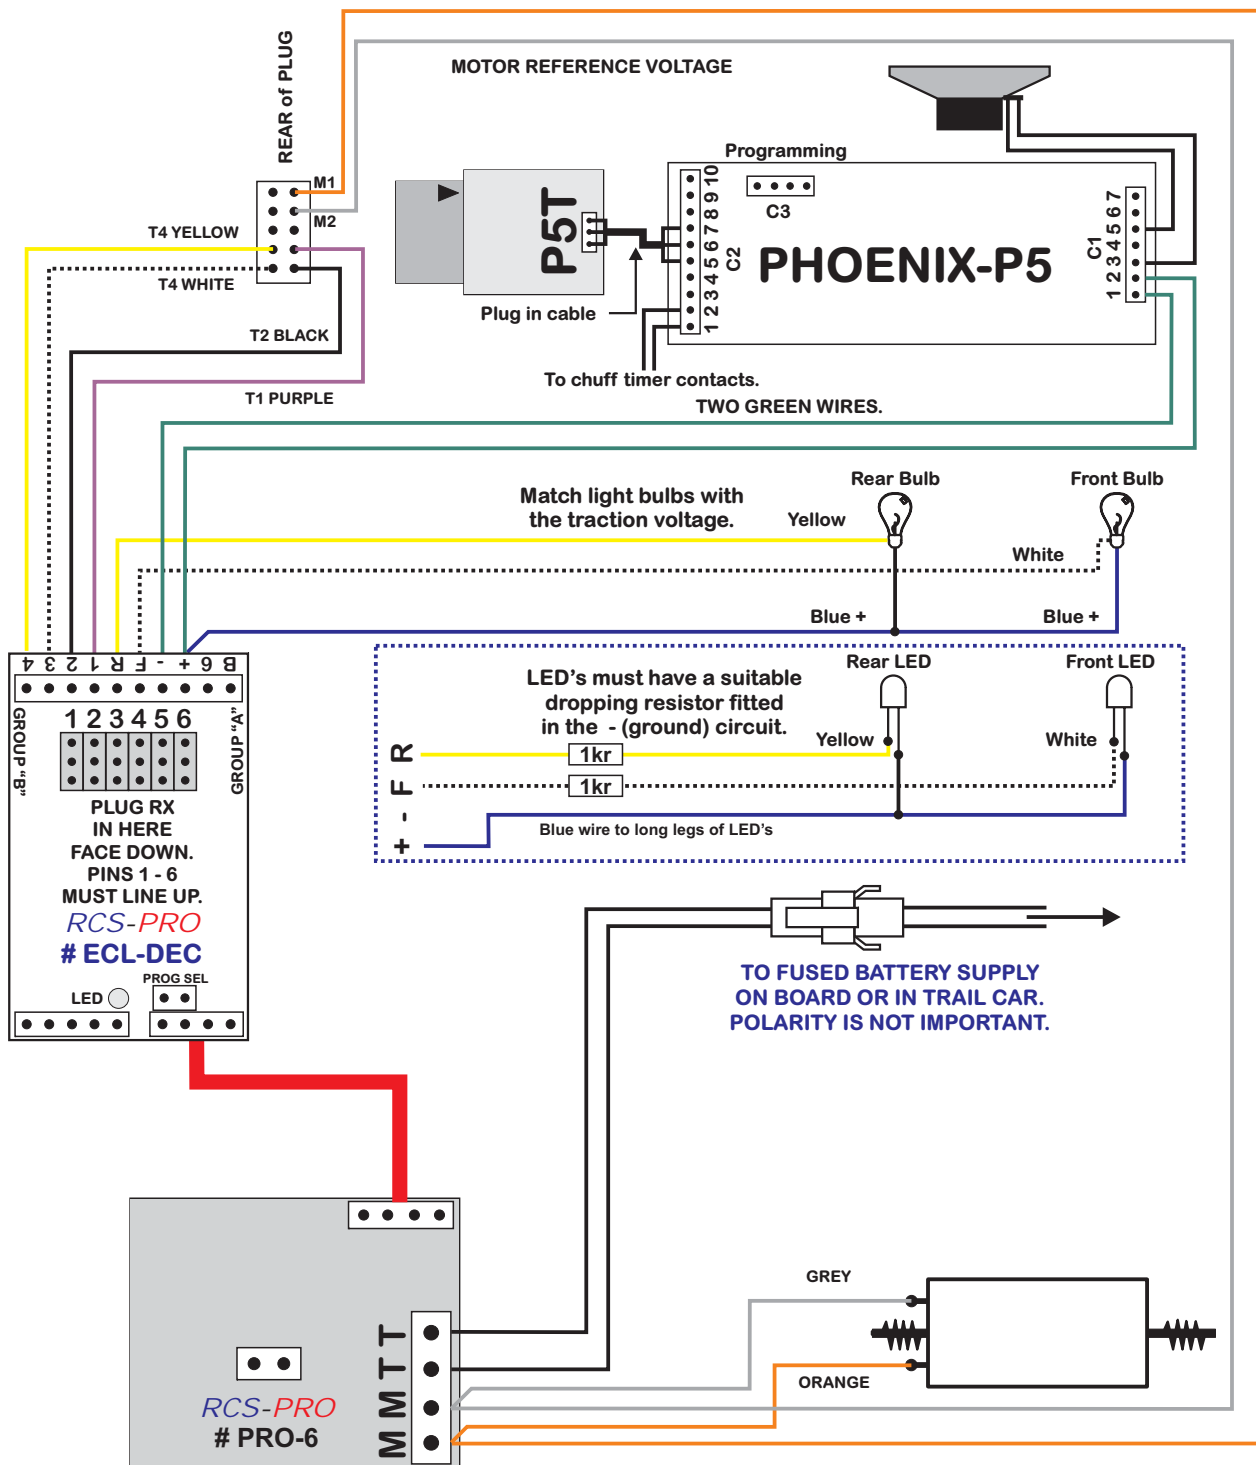

CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.
THEY MUST USE THE PRO-Av1 PROGRAM.
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.
THEY MUST USE THE PRO-Bv1 PROGRAM.


WIRING THE *RCS-PRO-6* ESC using track power **AND** battery back up. Phoenix P5 + P5T sound

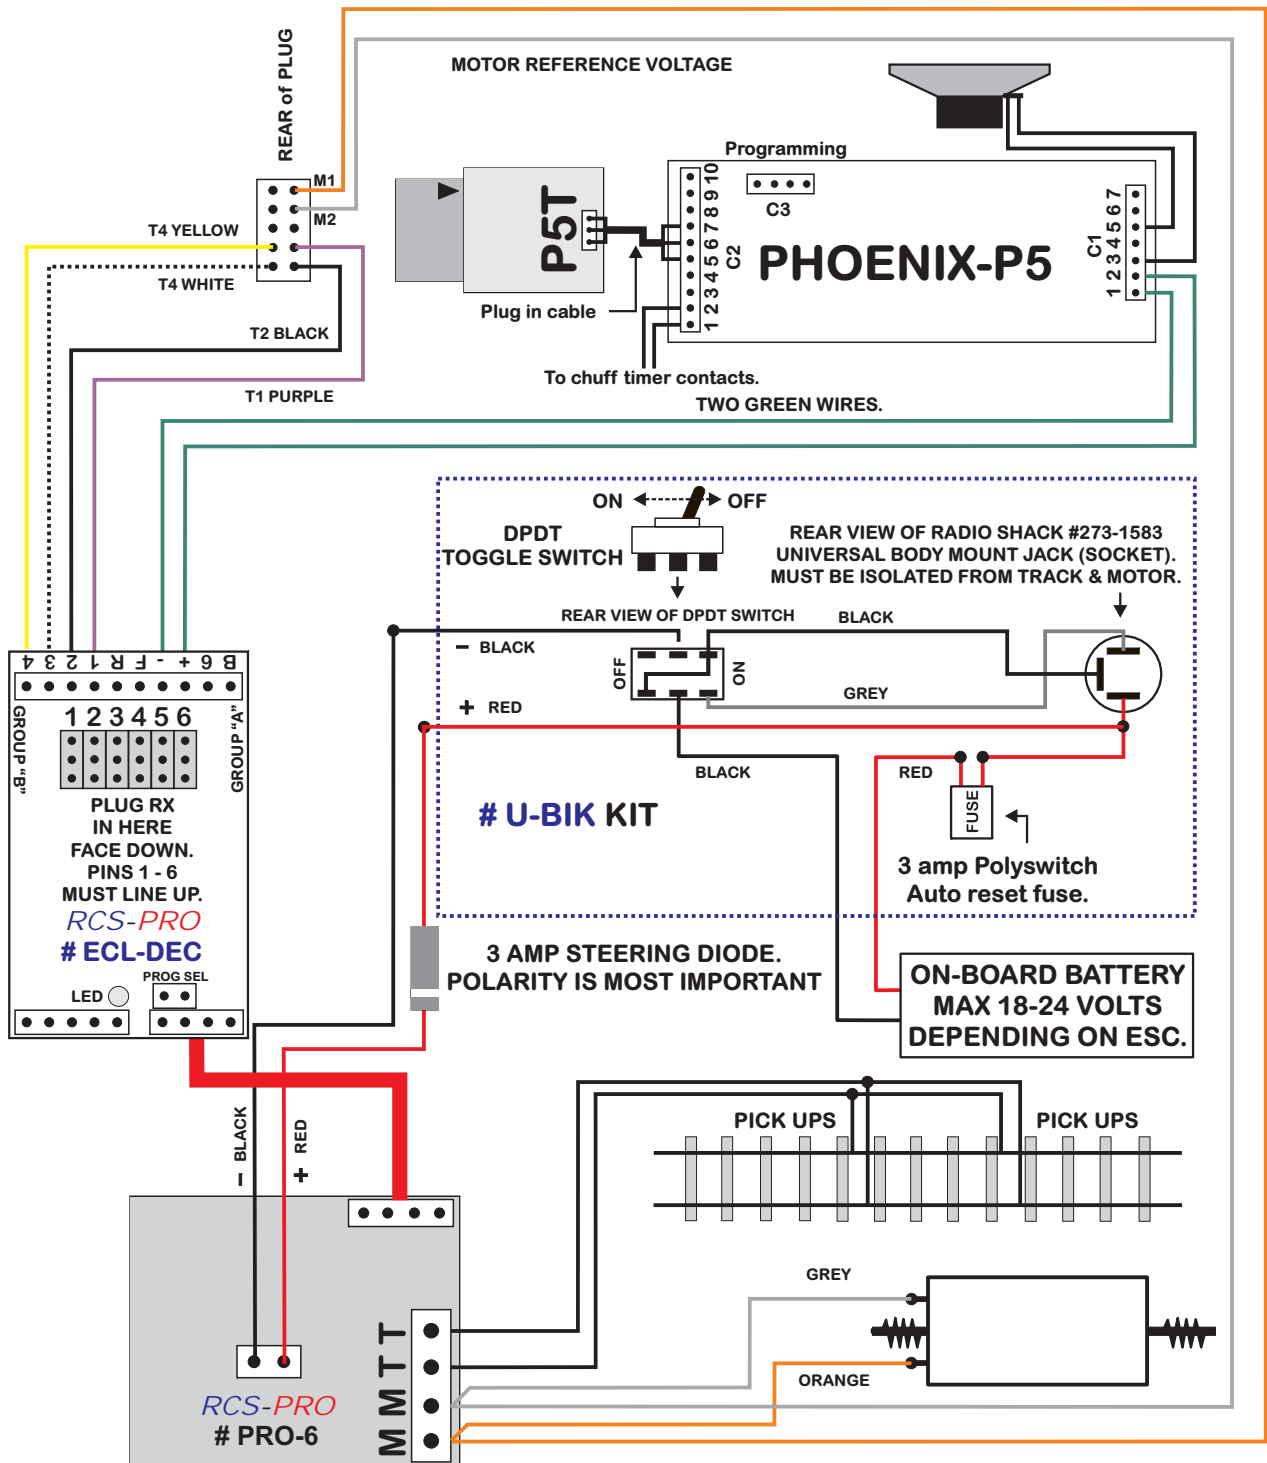

CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.
THEY MUST USE THE **PRO-Av1** PROGRAM.
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.
THEY MUST USE THE **PRO-Bv1** PROGRAM.


WIRING THE *RCS-PRO-6* ESC using track power **OR** batteries. Phoenix P5 +P5T sound

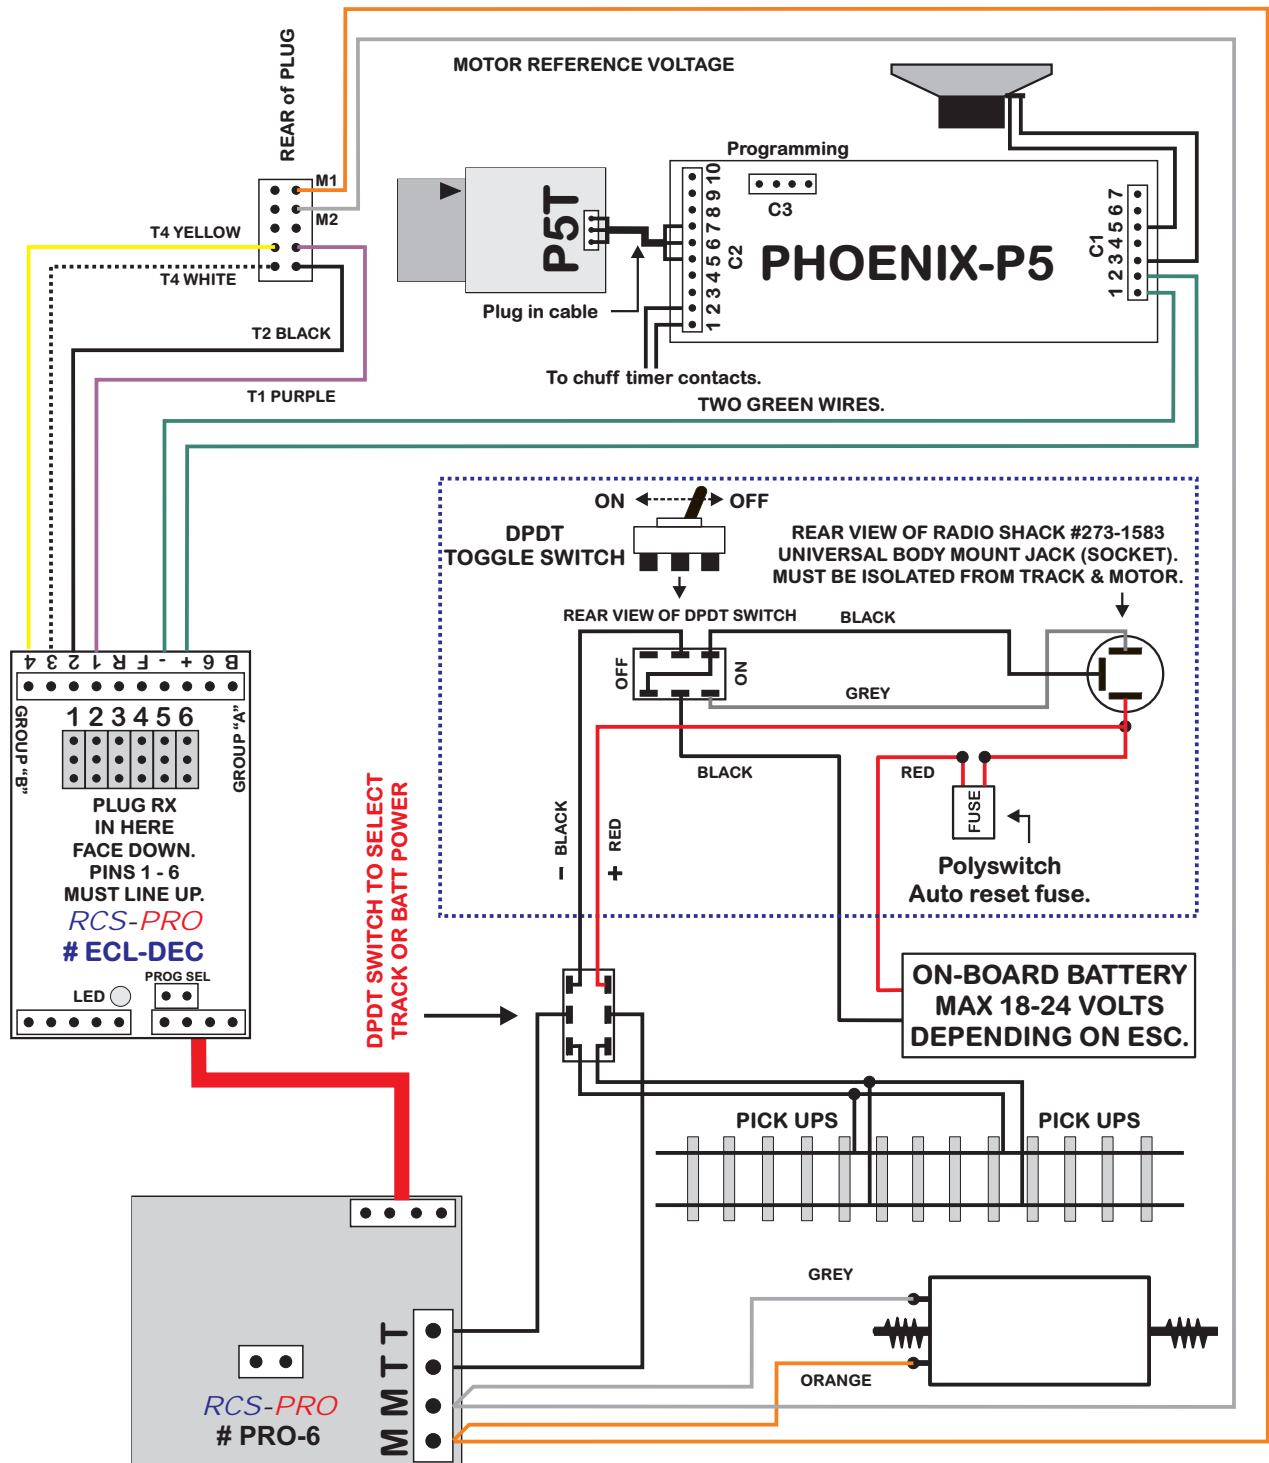

CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.
THEY MUST USE THE **PRO-Av1** PROGRAM.
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.
THEY MUST USE THE **PRO-Bv1** PROGRAM.

WIRING THE *RCS-PRO-6* ESC using track power **OR** batteries with a #BIK-U3 kit. Phoenix P5 + P5T sound

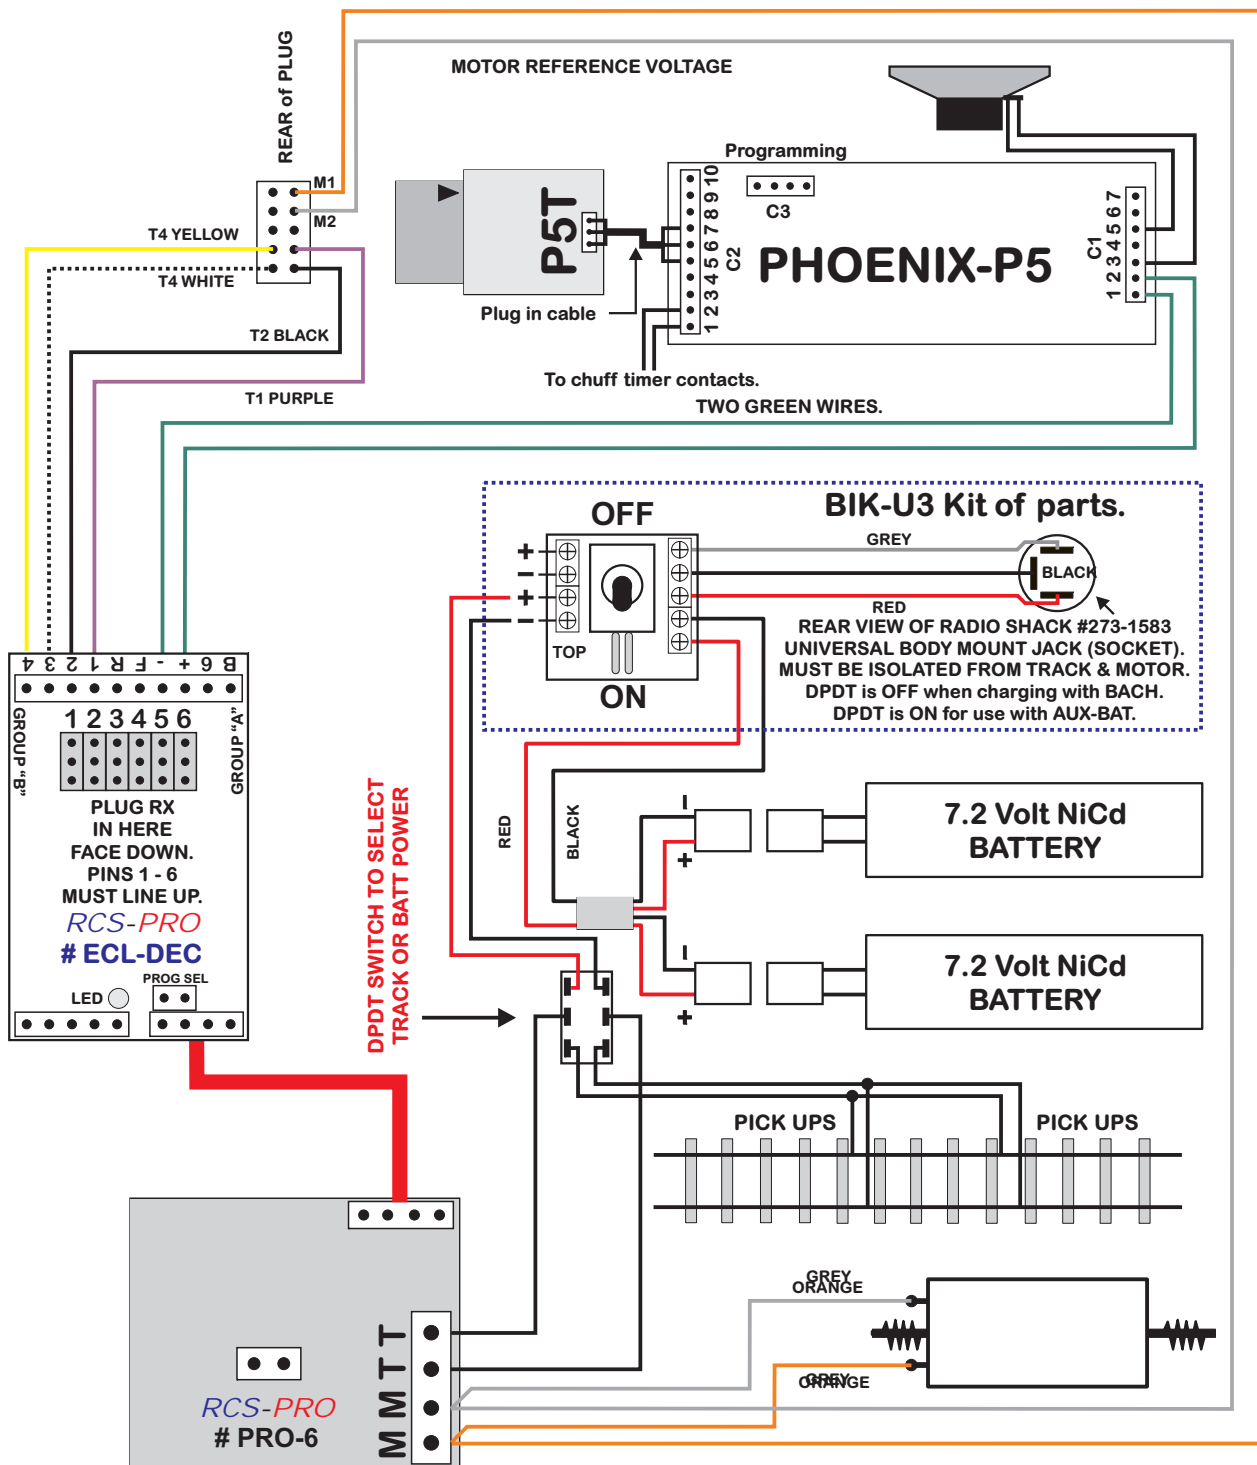

CAUTION:
SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.
THEY MUST USE THE PRO-Av1 PROGRAM.
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.
THEY MUST USE THE PRO-Bv1 PROGRAM.