


# WIRING THE *RCS-PRO-6* ESC with battery power & Phoenix P8 sound.

**N.B. It is OK to swap outputs #1, #2, #3 & #4 to suit TX sticks.**

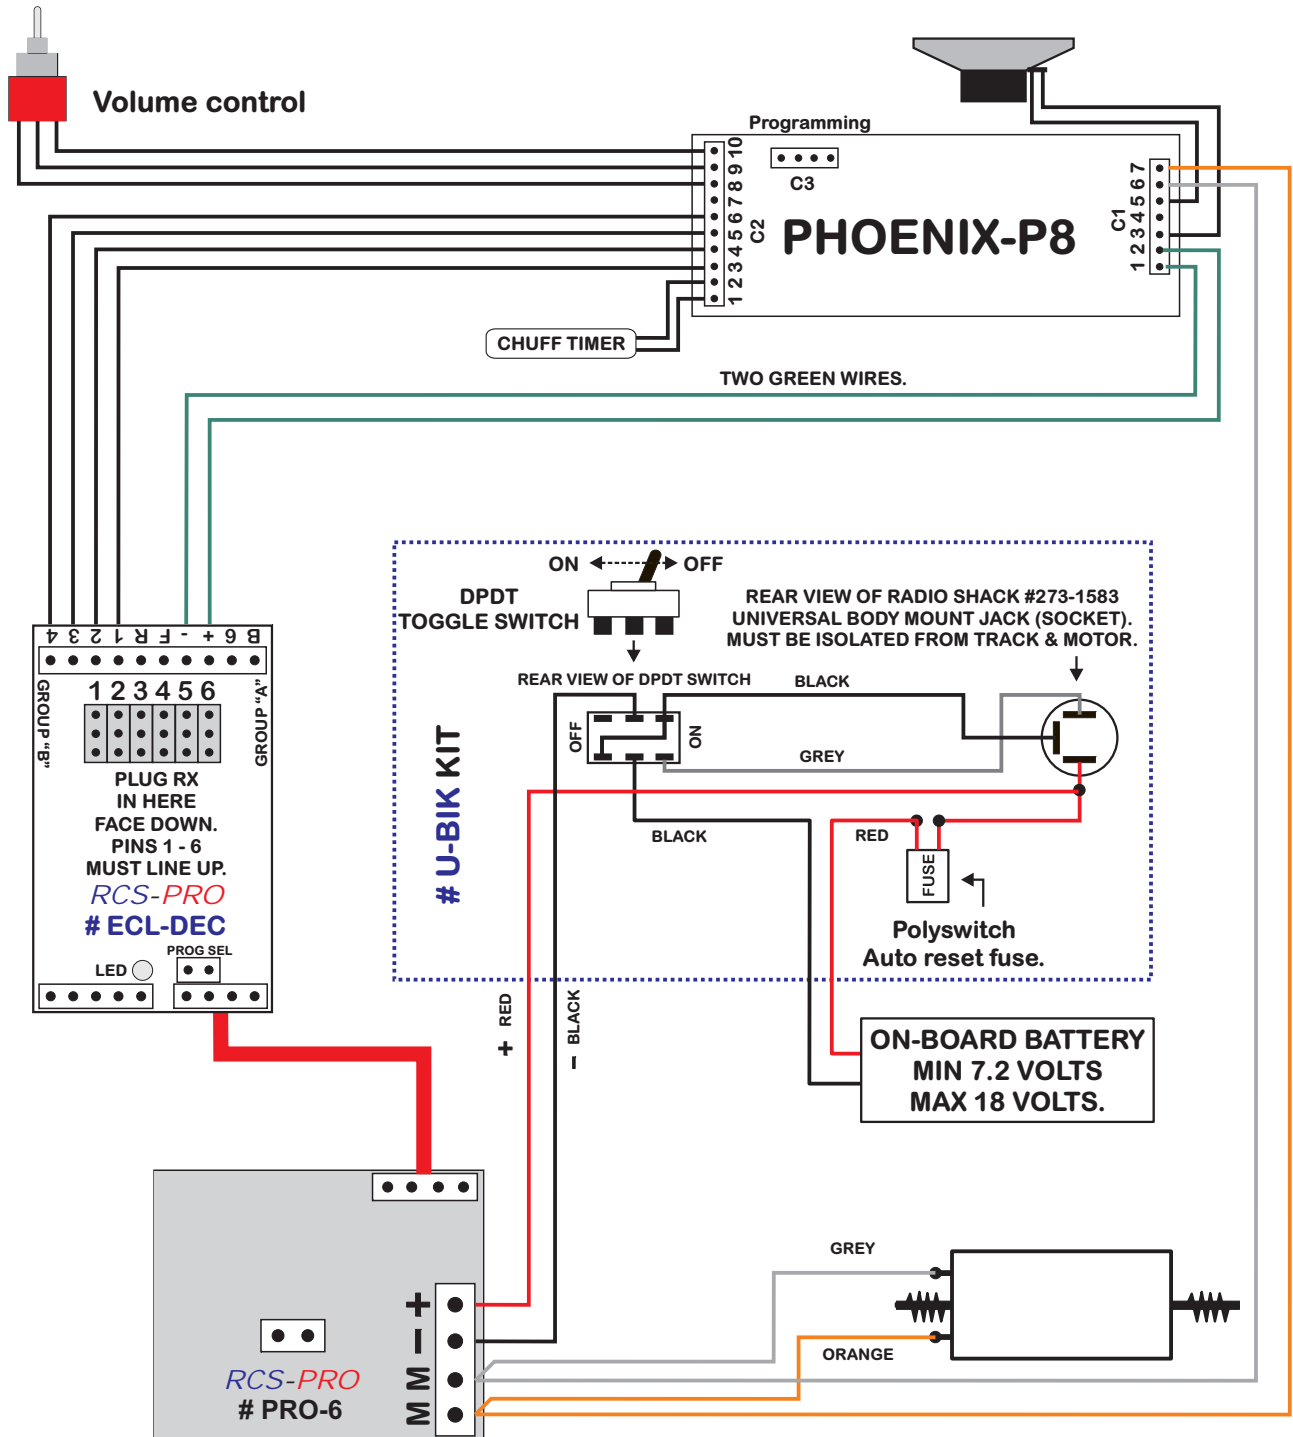


## CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.  
THEY MUST USE THE *PRO-Av1* PROGRAM.

HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.  
THEY MUST USE THE *PRO-Bv1* PROGRAM.


# WIRING THE *RCS-PRO-6* ESC with battery power only. Phoenix P8 sound. How to wire lights.

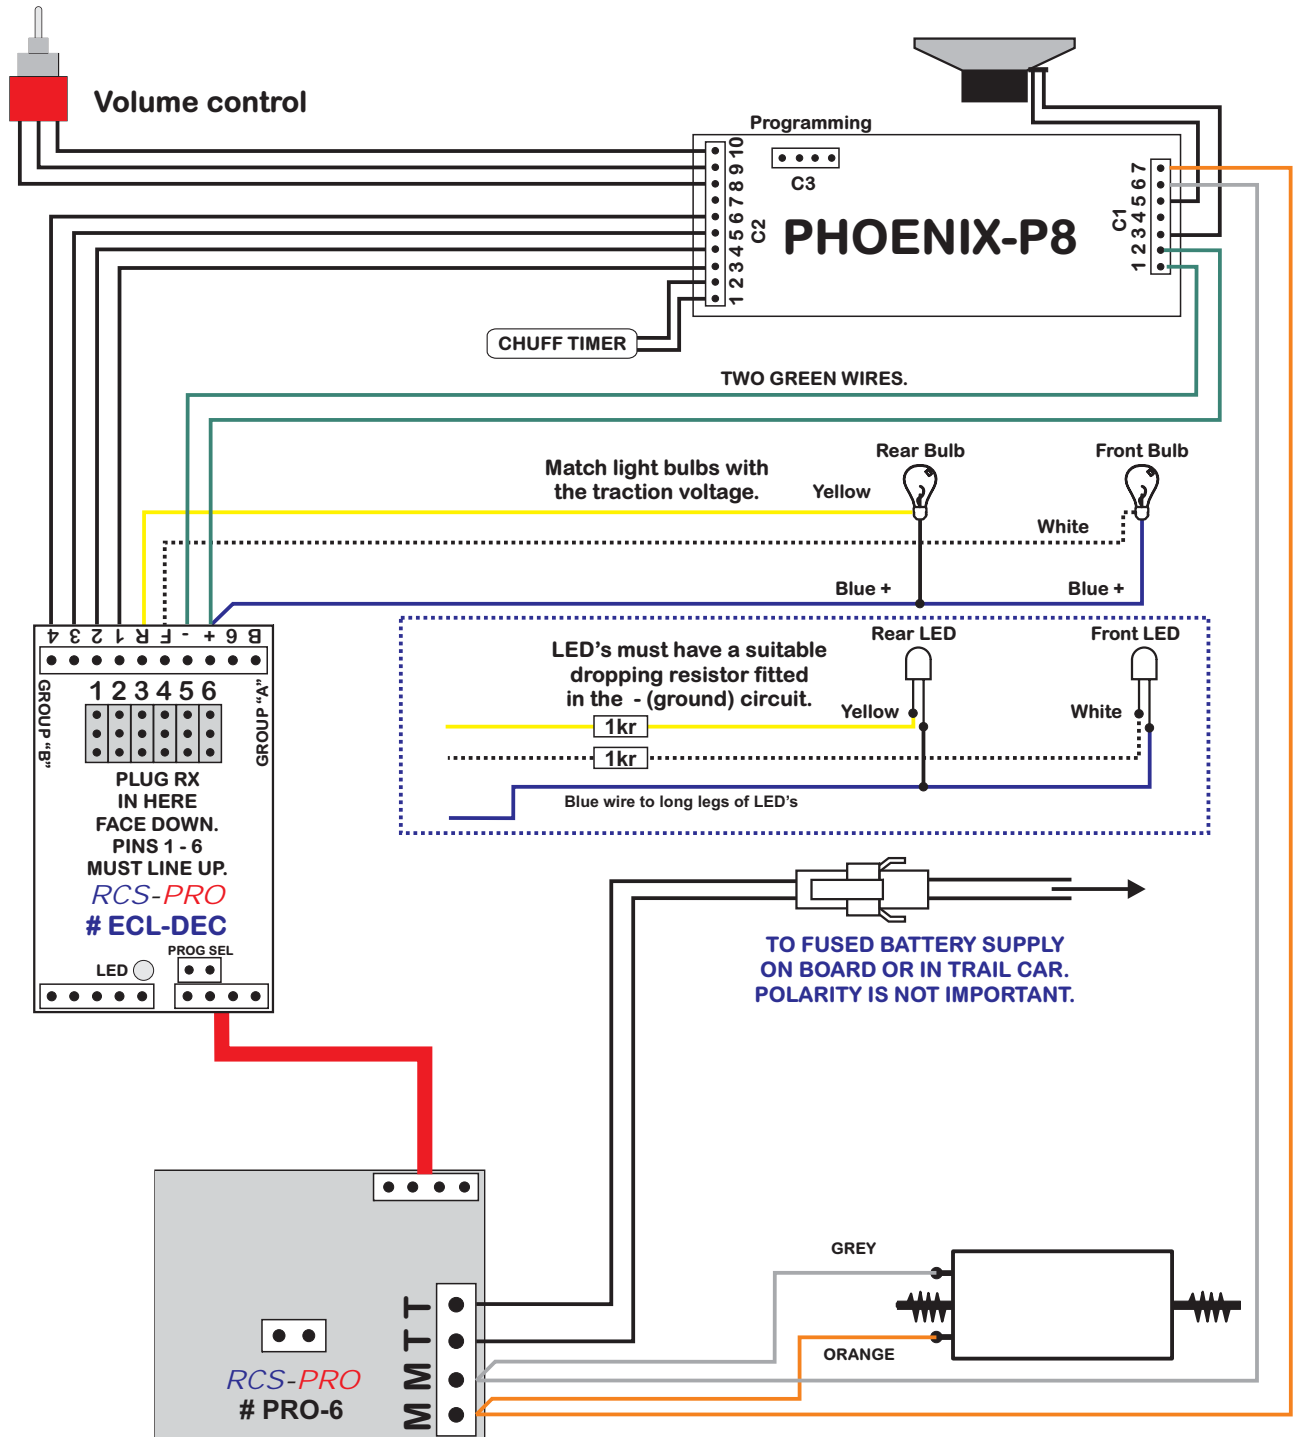

## CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.  
THEY MUST USE THE **PRO-Av1** PROGRAM.  
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.  
THEY MUST USE THE **PRO-Bv1** PROGRAM.


# WIRING THE *RCS-PRO-6* ESC using track power **AND** battery back up. Phoenix P8 sound.

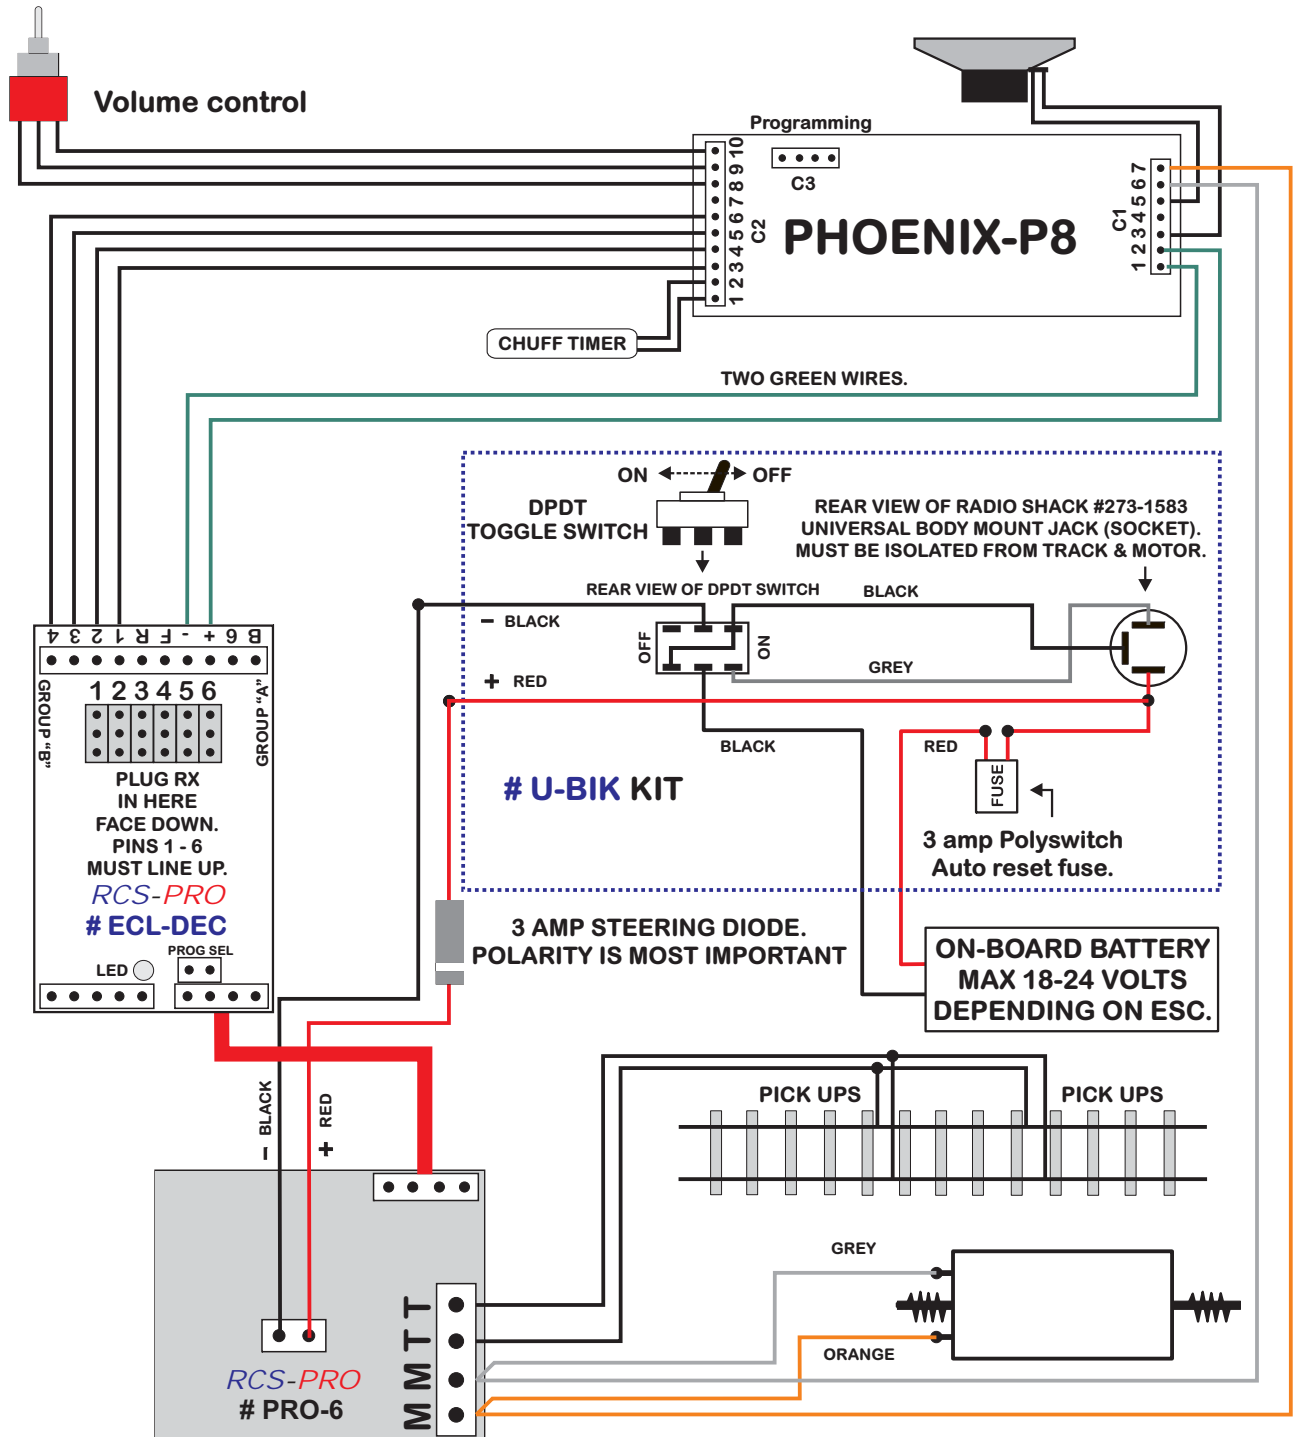

## CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.  
THEY MUST USE THE **PRO-Av1** PROGRAM.  
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.  
THEY MUST USE THE **PRO-Bv1** PROGRAM.

# WIRING THE *RCS-PRO-6* ESC using track power **OR** batteries. Phoenix P8 sound

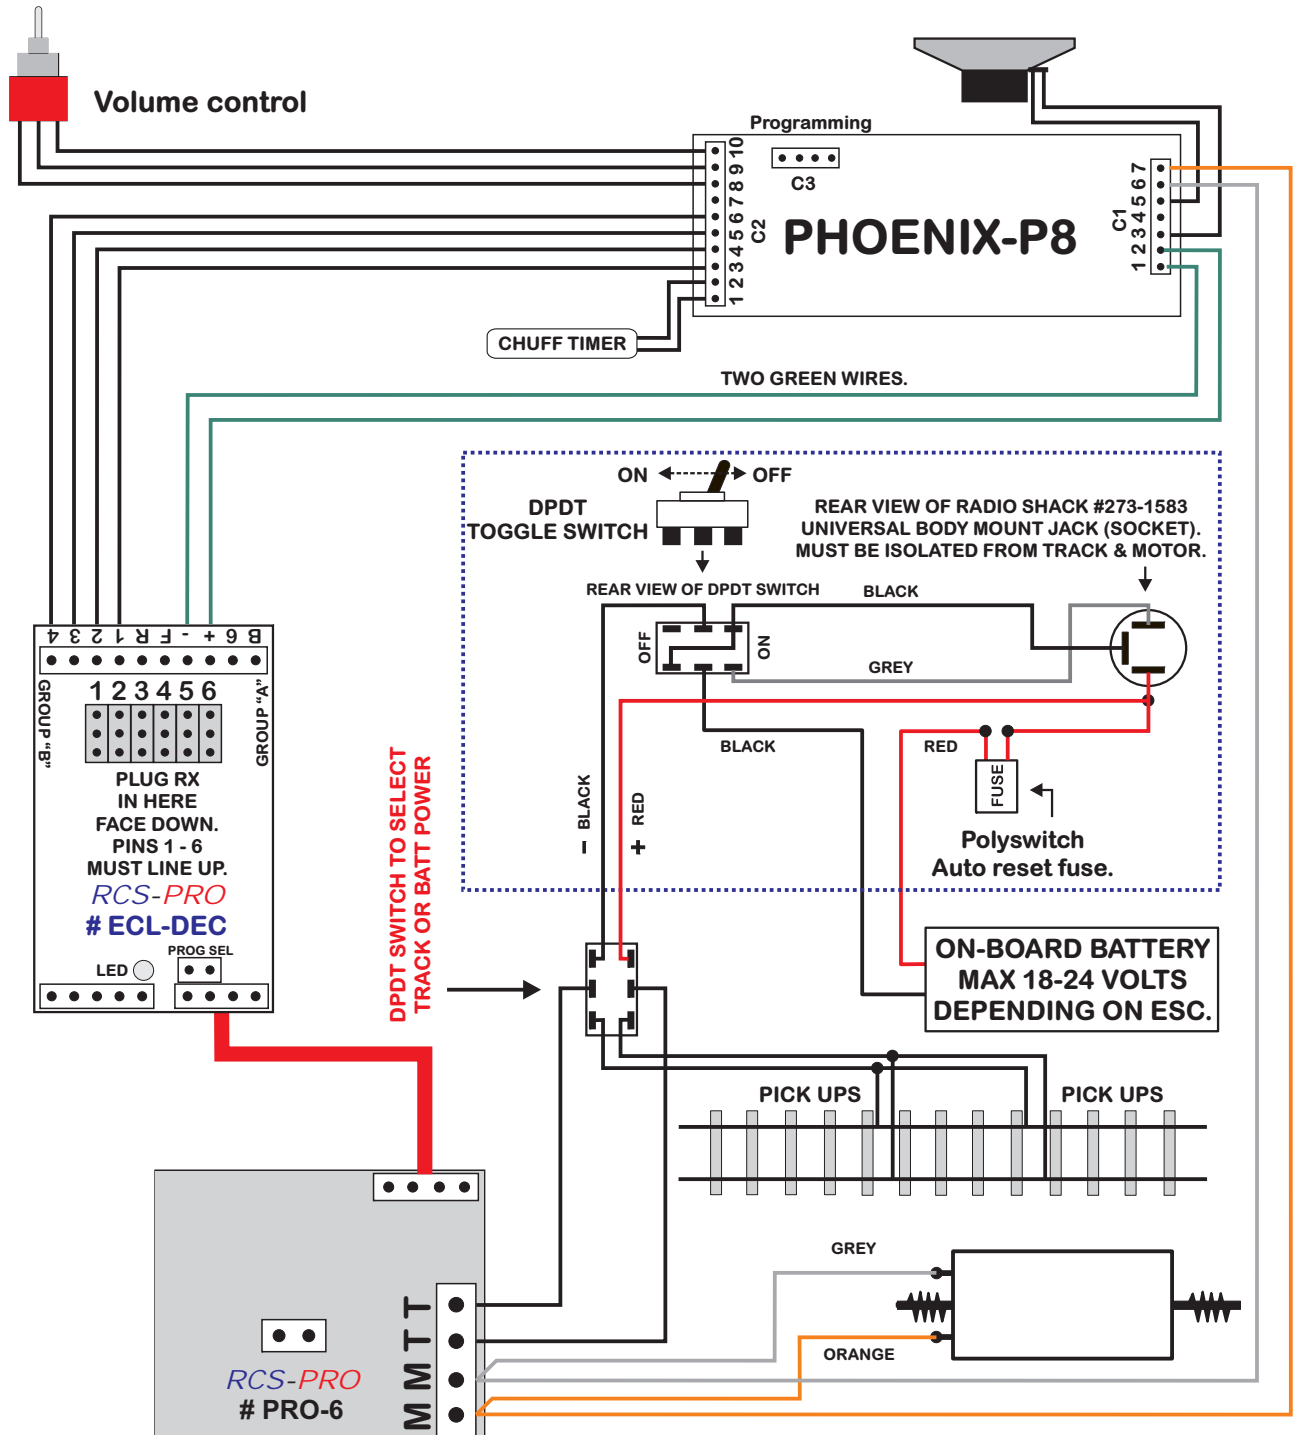


## CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.  
THEY MUST USE THE **PRO-Av1** PROGRAM.

HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.  
THEY MUST USE THE **PRO-Bv1** PROGRAM.

# WIRING THE *RCS-PRO-6* ESC using track power **OR** batteries with a #BIK-U3 kit. Phoenix P8 sound.

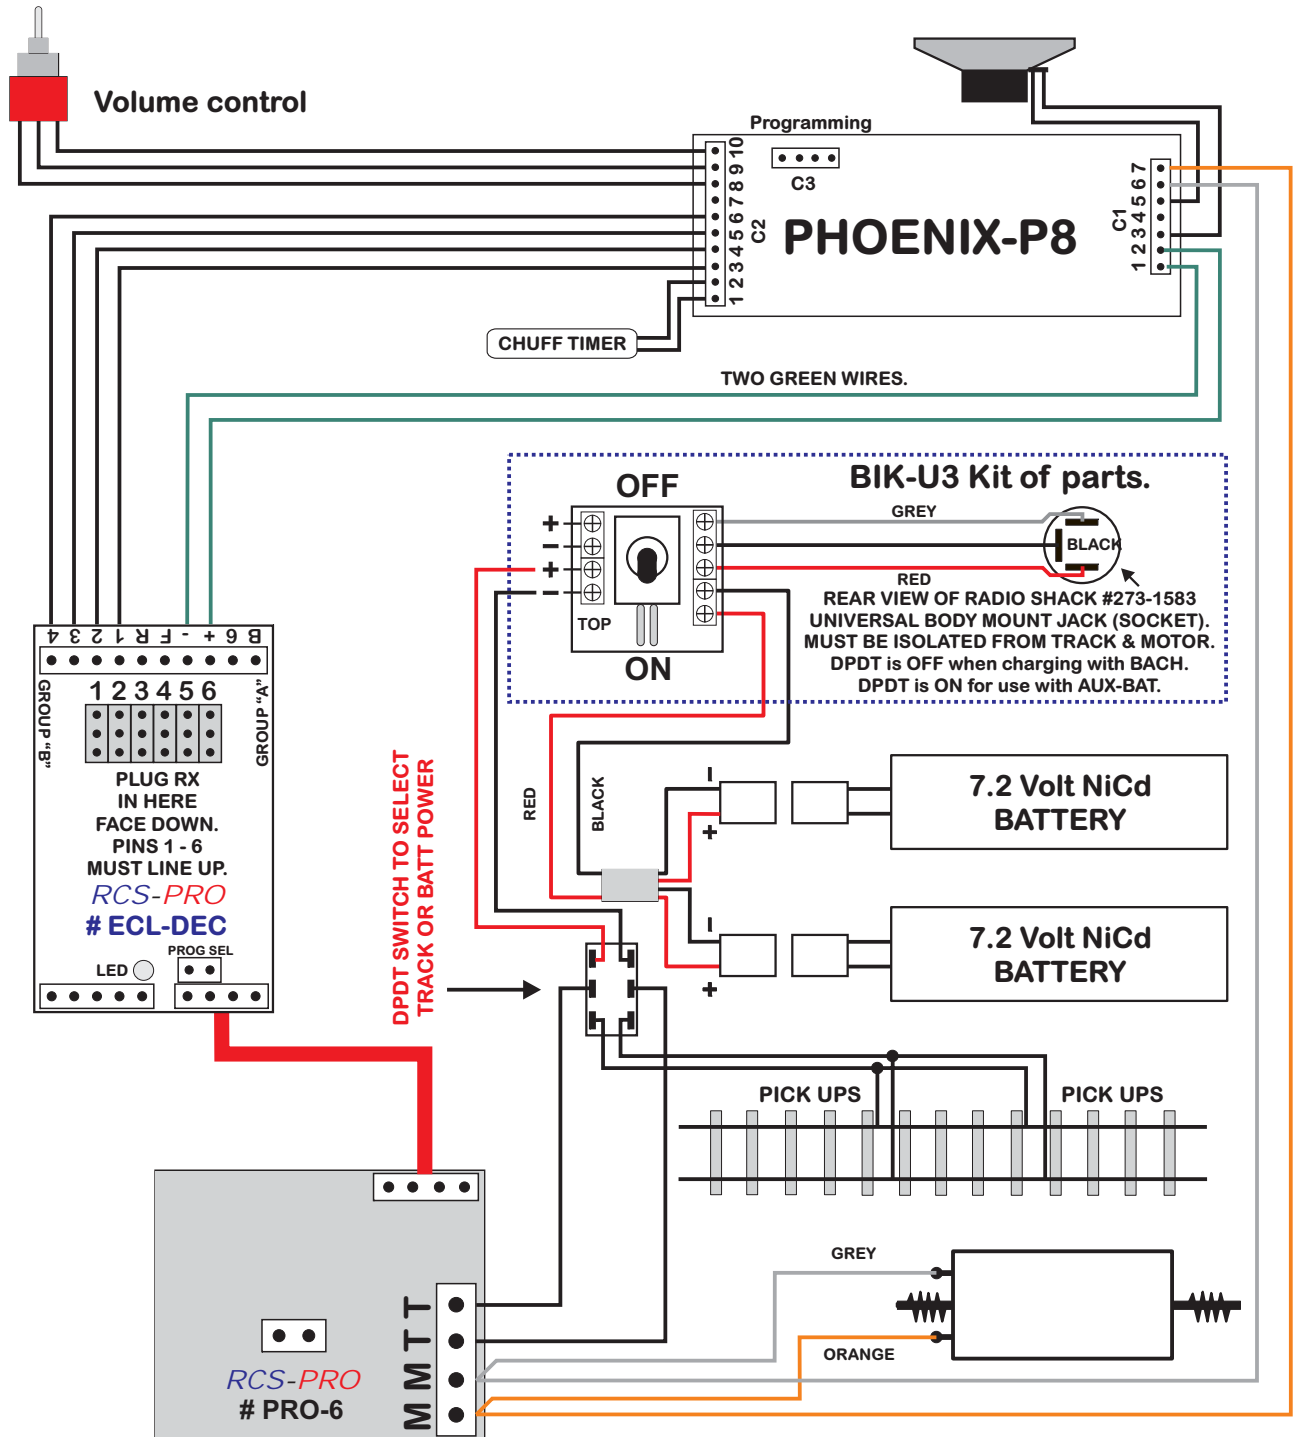

## CAUTION:

SPEKTRUM® R/C & PLANET TWISTER® R/C ARE GROUP "A" SYSTEMS.  
THEY MUST USE THE **PRO-Av1** PROGRAM.  
HOBBY KING® R/C & E-SKY® R/C ARE GROUP "B" SYSTEMS.  
THEY MUST USE THE **PRO-Bv1** PROGRAM.