

WIRING THE *BELTROL* AL-3r ESC with SIERRA SOUND

TO RX

For information on how to trigger BLOW DOWN & COUPLER CLANK see the # 2-M-F instructions

