

# WIRING THE BELTROL

## AL-5r ESC with SIERRA SOUND.

TO RX

For information on how to trigger BLOW DOWN & COUPLER CLANK see the # 2-M-F instructions

