

# WIRING THE CLASSIC

## OM-6 ESC w/PLANET TWISTER

PLEASE NOTE. THE LIGHTING OUTPUTS ON THE OM-6 ARE PRE-WIRED VIA THE PINS ON THE ESC.

Short Antenna

PLANET  
**R6M**

MIX 6  
GEAR 5  
RUDD 4  
ELEV 3  
AILE 2  
THRO 1  
BATT

BINDER

Three wire cable.  
Ensure plugs are  
correctly located.

Ensure plugs are correctly located.  
Orange wire towards middle of RX.

Please see the sound system brand specific instructions for how to wire a sound system.  
<http://www.beltr-rc.com/p1332-Instructions.html>

LED's must have a suitable dropping resistor fitted in the - (ground) circuit.

Rear LED

Front LED

Yellow

White

470r

470r

Blue wire to long legs of LED's

Match light bulbs with the traction voltage.

Rear Bulb

Front Bulb

Yellow

White

F R

F


BLACK

+

Blue +

Blue +

RED

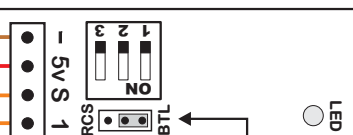

Head shunt must NOT be removed.

CLASSIC  
OM-6

M M - +

LED

+ - F R 1 2 3

BIK-U Kit of parts.

GREY

BLACK

RED REAR VIEW OF RADIO SHACK #273-1583 UNIVERSAL BODY MOUNT JACK (SOCKET). MUST BE ISOLATED FROM TRACK & MOTOR. DPDT is OFF when charging with BACH. DPDT is ON for use with AUX-BAT.

FUSE. We suggest you use a # RUE-300 3 amp Auto reset Polyswitch. NOT required with BIK-U3/6.

BATTERY PACK

12 - 24 VOLTS

GREY

ORANGE

